English

Vu+ SOLO²

Easy Setup Guide

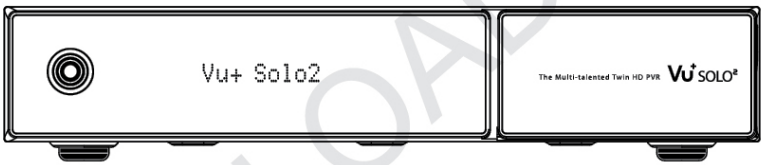

DOWNLOAD ONLY

What's included ?

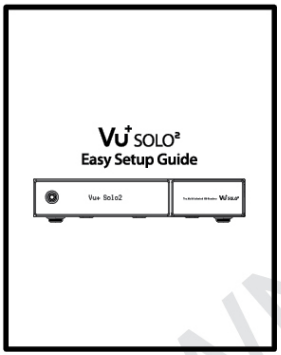

Easy Setup Guide

Power Adapter



RCU Battery

RCU



HDMI cable



Power cord

SATA cable

DOWNLOAD ONLY

Front Panel

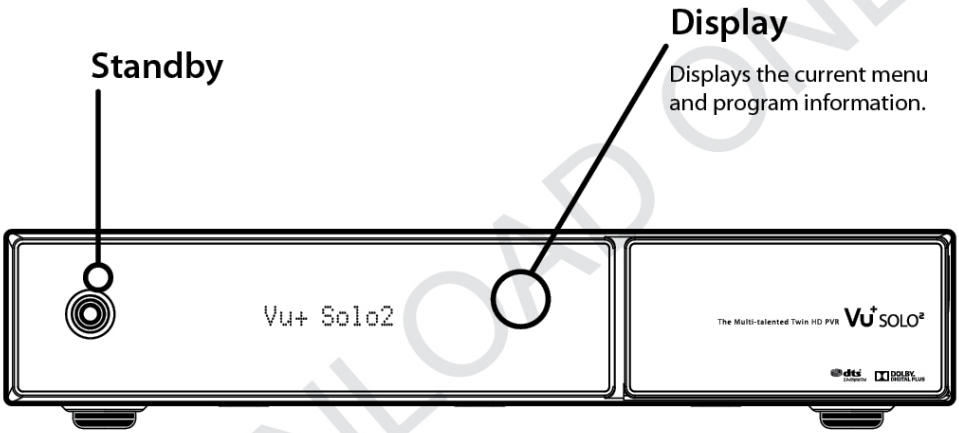

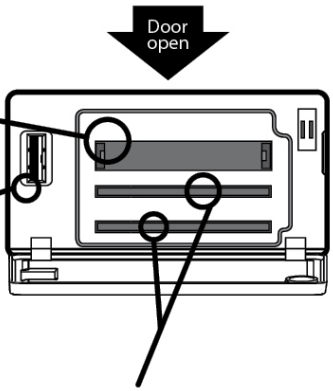

DOWNLOAD ONLY

Rear Panel

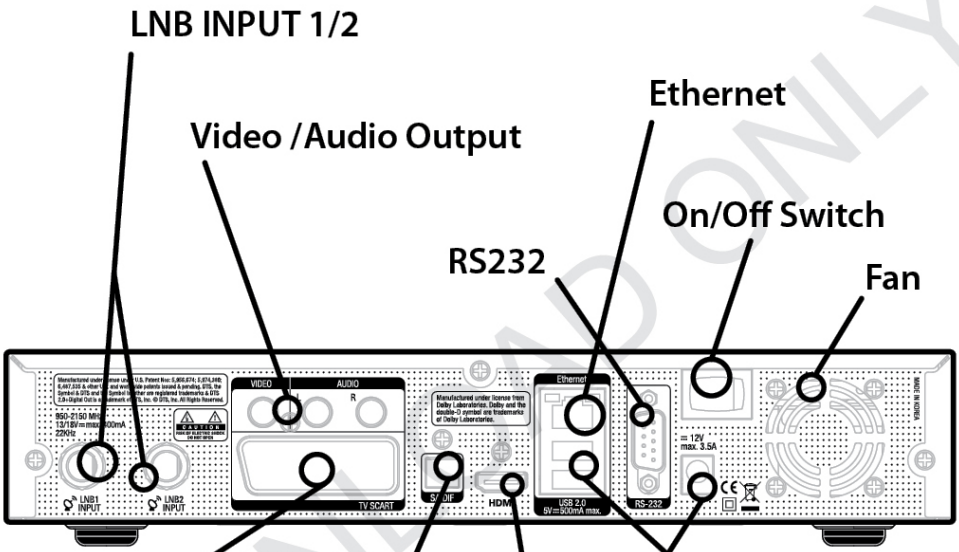

NOTE If using one signal cable, use LNB2 input.

DOWNLOAD ONLY

Remote Control

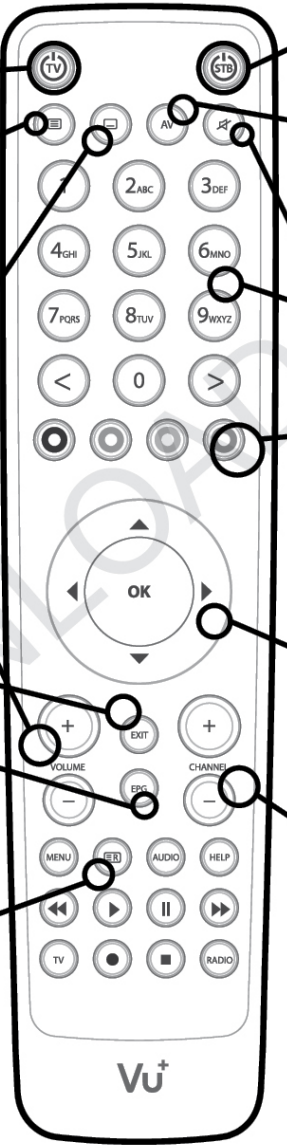

TV Power

STB Power

Subtitle

Displays the subtitle of the current channel if the channel provides subtitle.

AV

This button is used when selecting video source of TV.

Mute

Numeric Keys

Teletext

Displays the teletext information of the current channel if the channel provides subtitles.

Color Keys

- Red – mainly used for REC, Cancel, etc.
- Green – mainly used for OK
- Yellow
- Blue

Volume+/-

EXIT

Navigation Keys

Navigates up/down and left/right on the menu options.
Up/down keys are used to call up the channel list.

EPG

Displays the Electronic Program Guide (EPG) information if provided.

CHANNEL+/-

Recording List

Displays the list of recordings stored on the internal HDD if any.

NOTE

Vu+ QWERTY is also supported. (optional)

DOWNLOAD ONLY

Connecting Cable

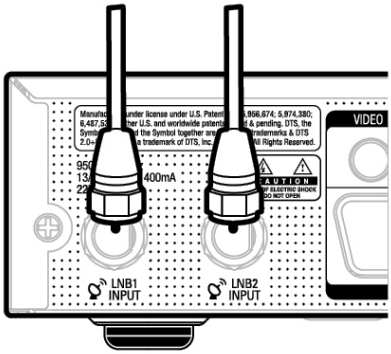

1. Connect Satellite Signal Cable to SOLO2

Vu+ SOLO2 is DVB-S2 Twin Tuner PVR.
For the best use of SOLO2, connect two separate satellite cables to LNB 1 & 2.

NOTE If using one signal cable, use LNB2 input.

2. Connect SOLO2 to the TV

One HDMI cable is included in the accessory box. Connect one end of the cable to the HDMI input of TV. Connect the other end to the HDMI output of SOLO2.

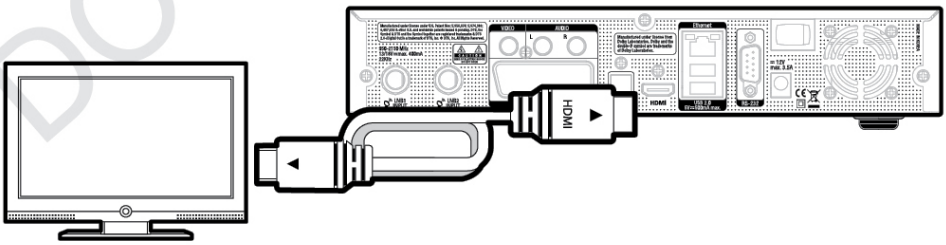

DOWNLOAD ONLY

Connecting Cable

3. Power Up

A power cord and an adapter are provided in the accessory box.
Plug the round end of the adapter power cord into the power input of SOLO2.

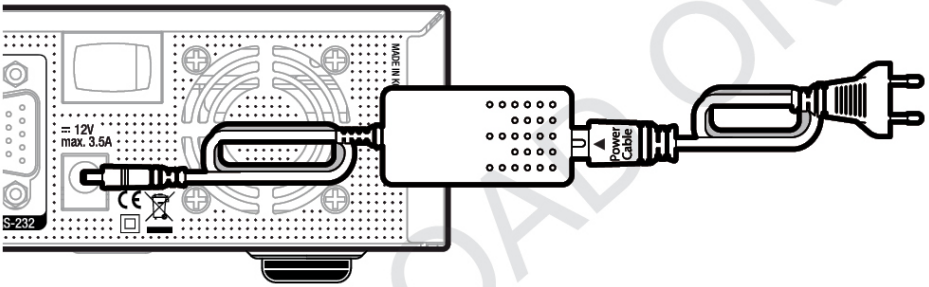

DOWNLOAD ONLY

NOTE

AC input condition

- Nominal Voltage Range: 100 – 250 VAC
- Maximum Voltage Range: 90 – 264 VAC
- Nominal Frequency: 50 / 60 Hz
- Maximum Frequency Range: 47 – 63 Hz

Run First Time Installation

Step 1. Language Selection

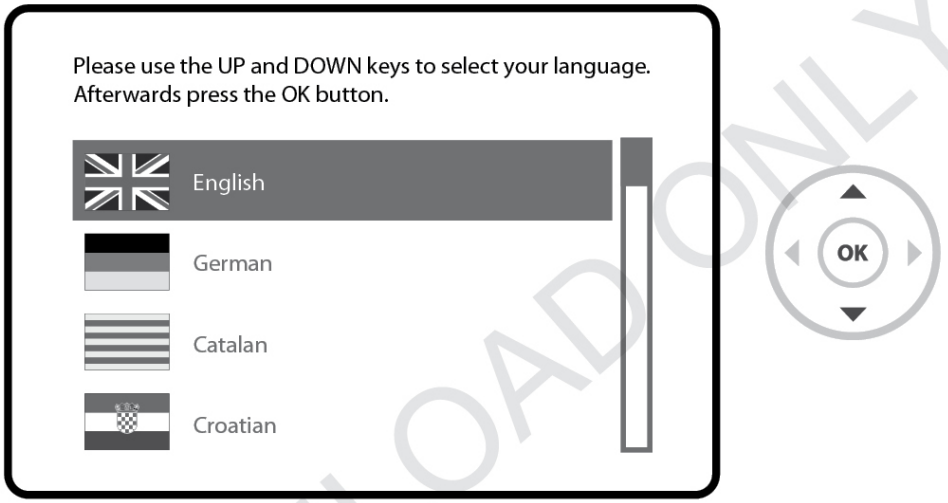

Step 2. Configuring Satellite Connection

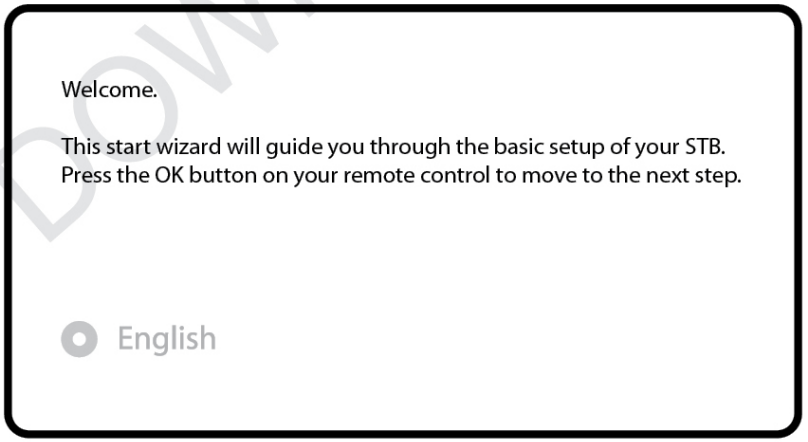

DOWNLOAD ONLY

Run First Time Installation

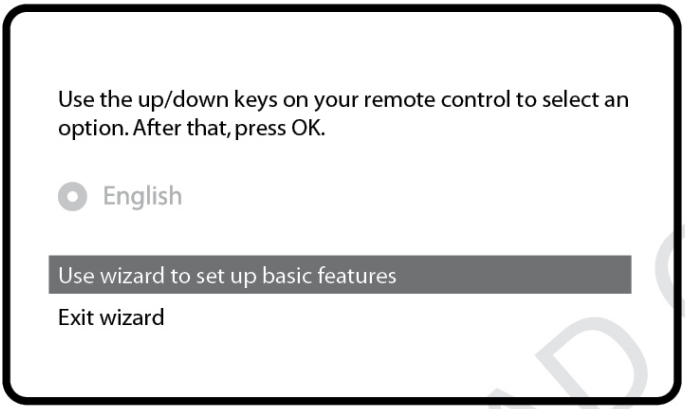

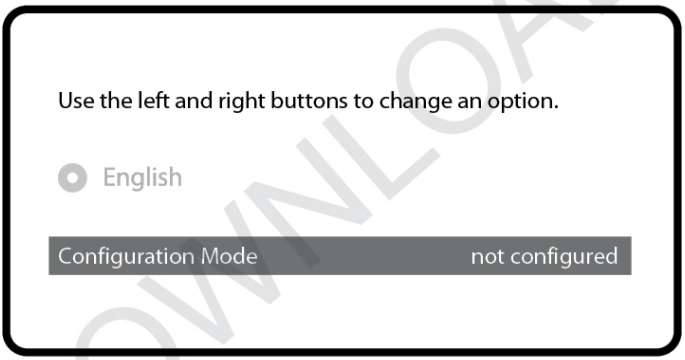

Using LEFT/RIGHT key, you can choose one of the following Configuration Modes:

- Nothing connected
- Simple
- Loop through to: mode to make the LNB1 be internally connected to the LNB2 in.
- Equal to: mode to use the same configuration as that of Tuner B.
- Advanced: for an advanced user configuration.

DOWNLOAD ONLY

Run First Time Installation

If you choose Simple configuration mode, the following picture will appear.

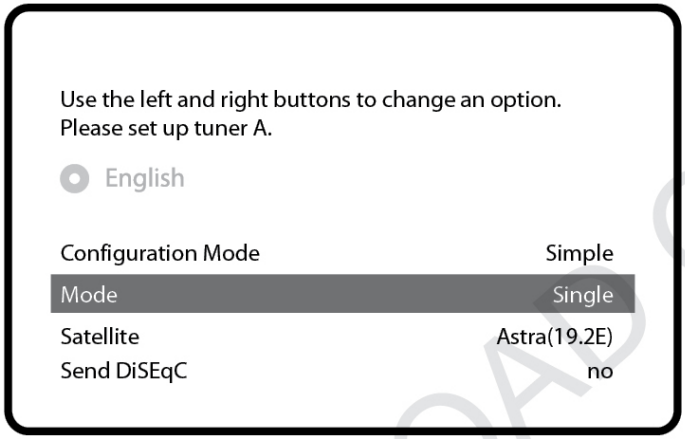

The five modes are available for the satellite cable connection between LNB and your Vu+ as below :

• Single
This option is used to receive a single satellite with a single LNB. The cable from LNB is directly connected to Vu+.

For the other modes, please refer to the user manual of SOLO2.

DOWNLOAD ONLY

Run First Time Installation

Step 3. Channel Scan

• Selecting Scan Mode - Automatic Scan / Manual Scan
Channel scanning is possible either in Automatic Scan mode or Manual Scan mode.

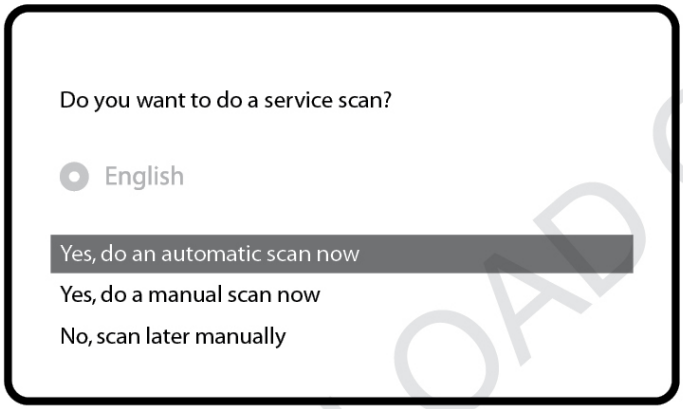

• Automatic Scan
If you choose Automatic Scan, you will be asked whether to erase all the existing channels before scaninig.

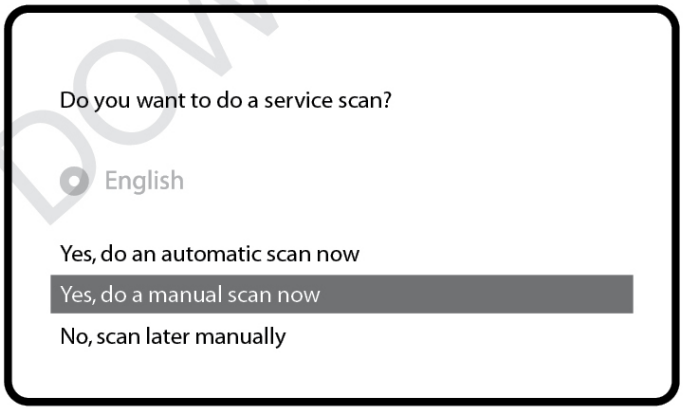

DOWNLOAD ONLY

Run First Time Installation

Press OK to initiate the channel scan.

• Channel Scanning
The scanned channels will be displayed if the previous configurations have been done correctly.

DOWNLOAD ONLY

Run First Time Installation

Step 4. Install Default Service List

Here you will be asked whether you want to install the default satellite lists. Press OK and the following image appears:

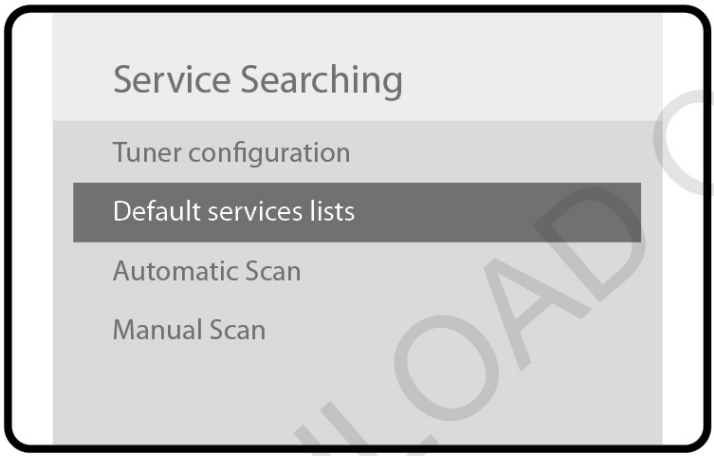

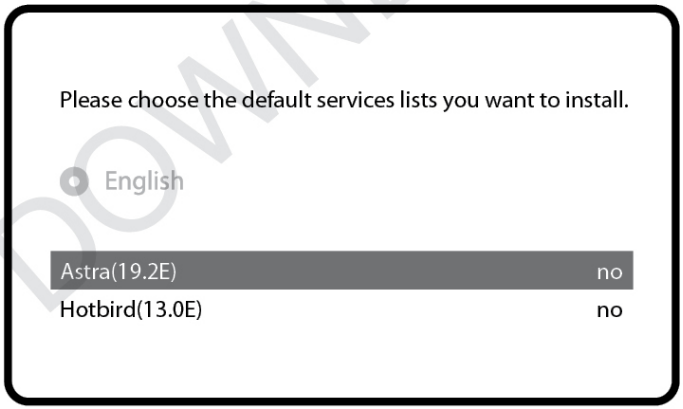

DOWNLOAD ONLY

Run First Time Installation

Step 5. Parental Control Option

Here you can choose whether to enable the parental control option. If you press OK, you will be asked to enter PIN number

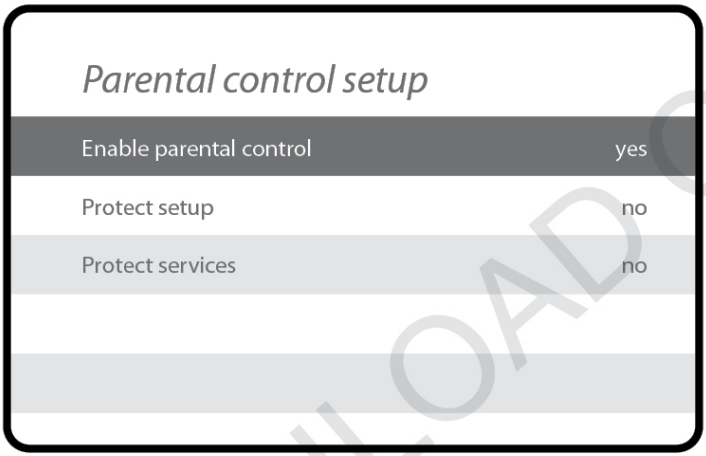

DOWNLOAD ONLY

For more information about SOLO2

1. Go to "Plugins" from Main Menu
2. Click "Opera Web Browser"
3. Go to "Tools" - "Bookmark"
4. Click "User Manual"

DOWNLOAD ONLY

TIP

Easy way to consult the manual: By long pressing 'Help' button, you can also access to On-Screen Manual page.

The Multi-talented Twin HD PVR

DOWNLOAD ONLY

www. vuplus.com

Vu+® is a registered trademark of Ceru Co., Ltd.